


WAWAK®

HOW TO CHANGE A FISKARS ROTARY CUTTER BLADE


STEP ONE

Unscrew to remove the thumb nut.

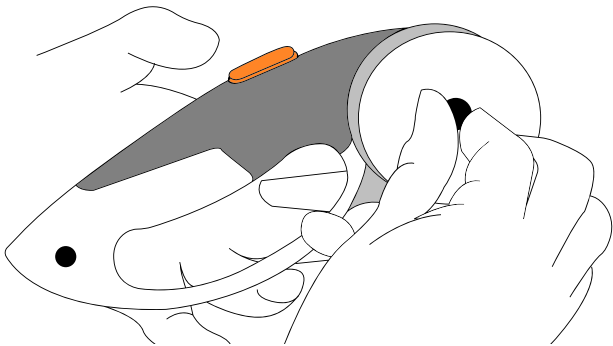


STEP TWO

Hold onto blade hub to remove used blade.

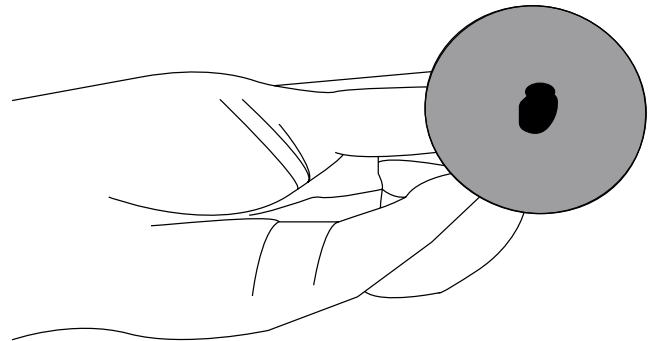


STEP THREE

Discard used blade and place new blade on the hub.

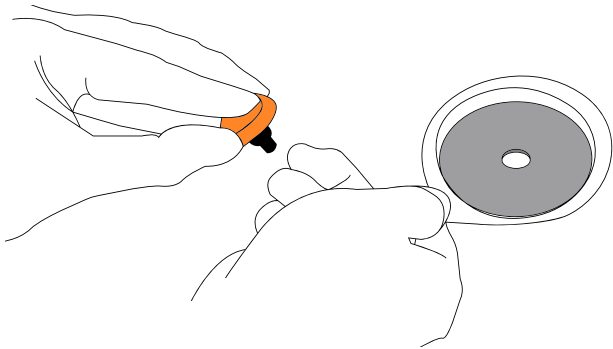


STEP FOUR

Replace the new blade with the hub onto the handle.

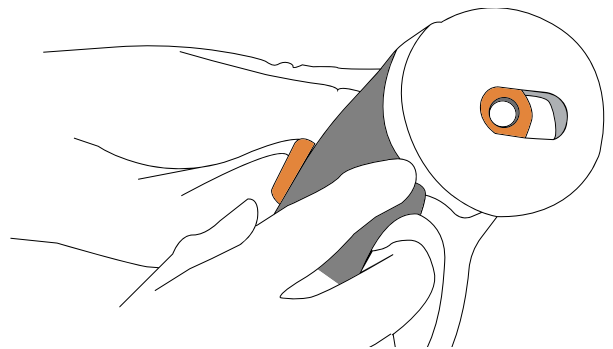

STEP FIVE

Replace the thumb nut.

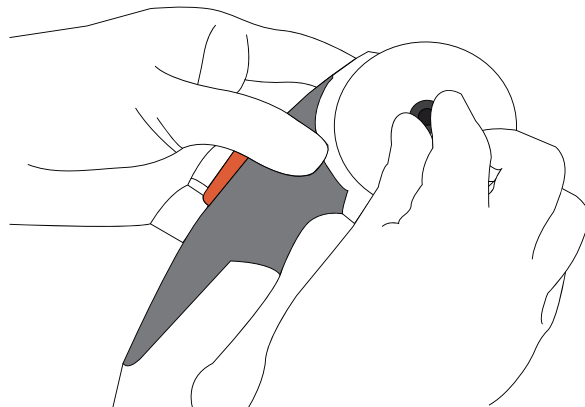

Sources: www.fiskars.com/en-us/special-feature/how-to-change-your-rotary-blades
If you have any questions, please call us at 800-654-2235 or email customerservice@wawak.com.